# INSTALLATION GUIDE

## CTS TURBO B9/B9.5 AUDI A4, A5, AllRoad, S4, S5, RS4, RS5 High-Flow Intake System
## CTS-IT-964



www.CTSTURBO.com

## WHAT IS INCLUDED

1. Intake Kit



## NOTES

Always make sure the car is safe to work on. Do not work on a hot motor.

## STEP 1

Remove the engine cover




## STEP 2

Remove the engine cover latch.




## STEP 3

Then pull the cover towards you to remove.



## STEP 4

Remove the 2 torx screws securing the air dam.

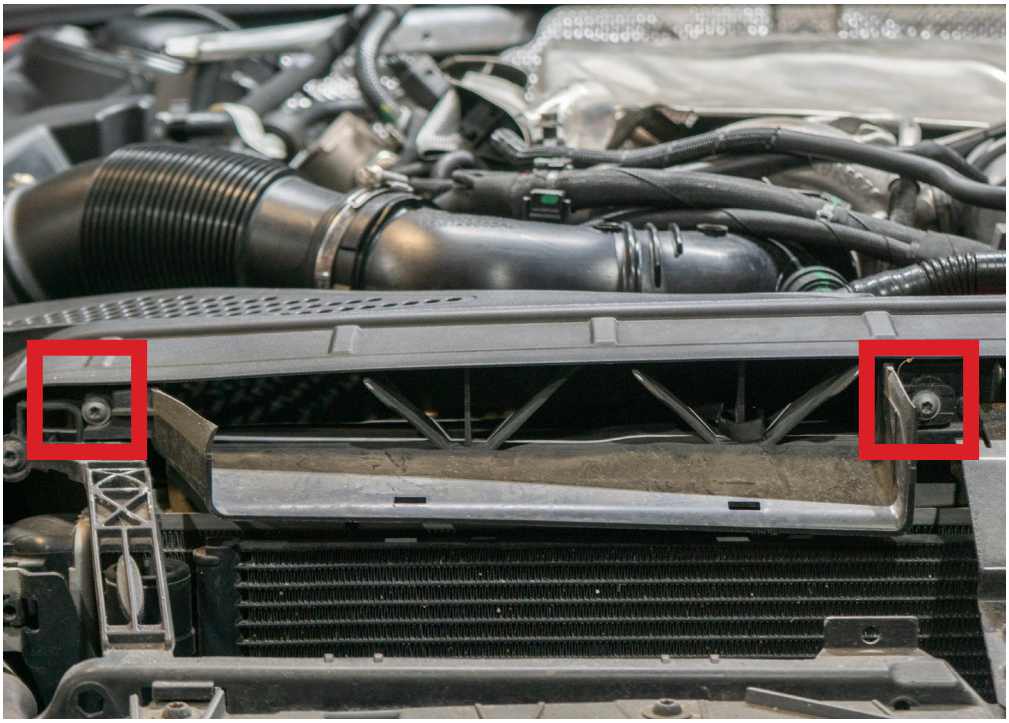

## STEP 5

Remove the air dam.



## STEP 6

Loosen the clamp that connects the intake pipe and turbo inlet pipe.

Remove the stock air box



## STEP 7


1. Place the air filter into the air box

2. Install the velocity stack

3. Tighten the clamp to secure the velocity stack to the air filter

4. Install the provided plate and hardware to secure the air filter to the air box



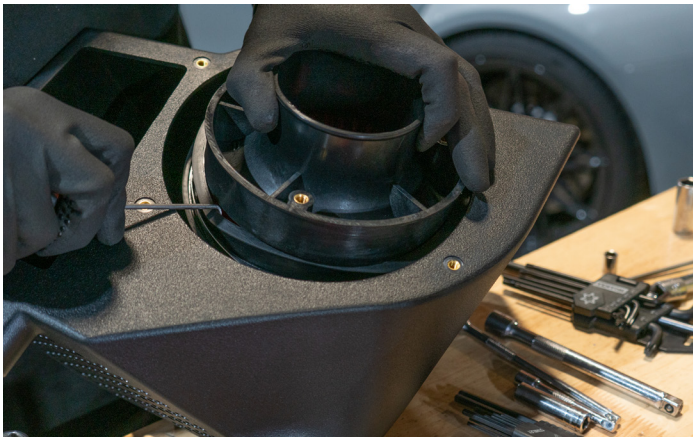






## STEP 8

Install the provided mounting feet to the air box.



## STEP 9


Install the air box and loosely install the provided silicone coupler.

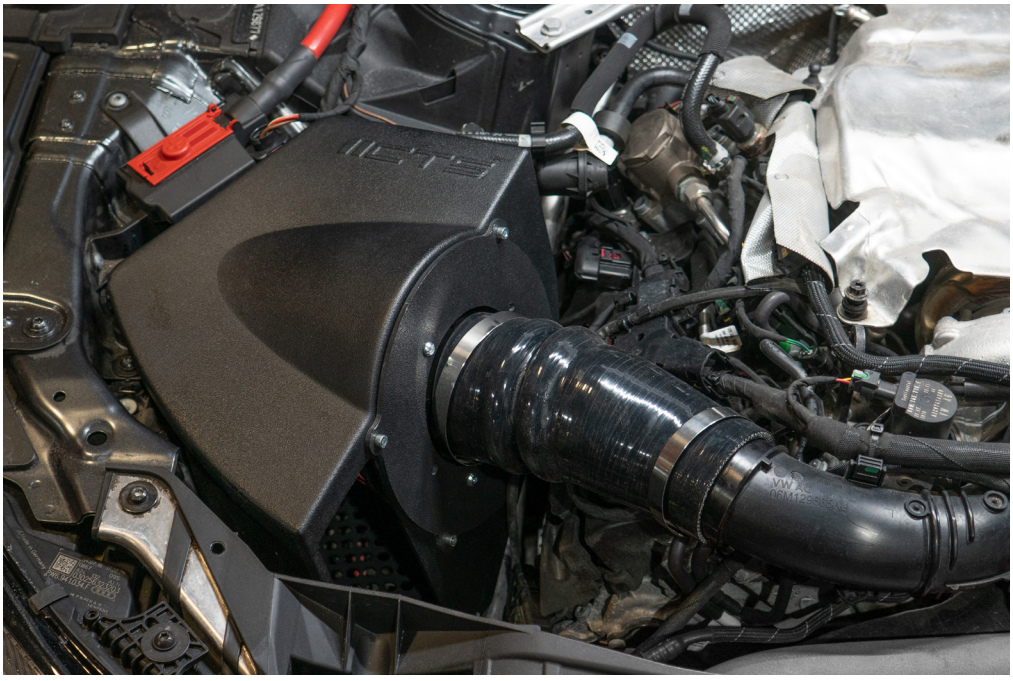

## STEP 10


When installing the silicone there will be a slight gap on the air box side. This is intentional.

Tighten the clamps.

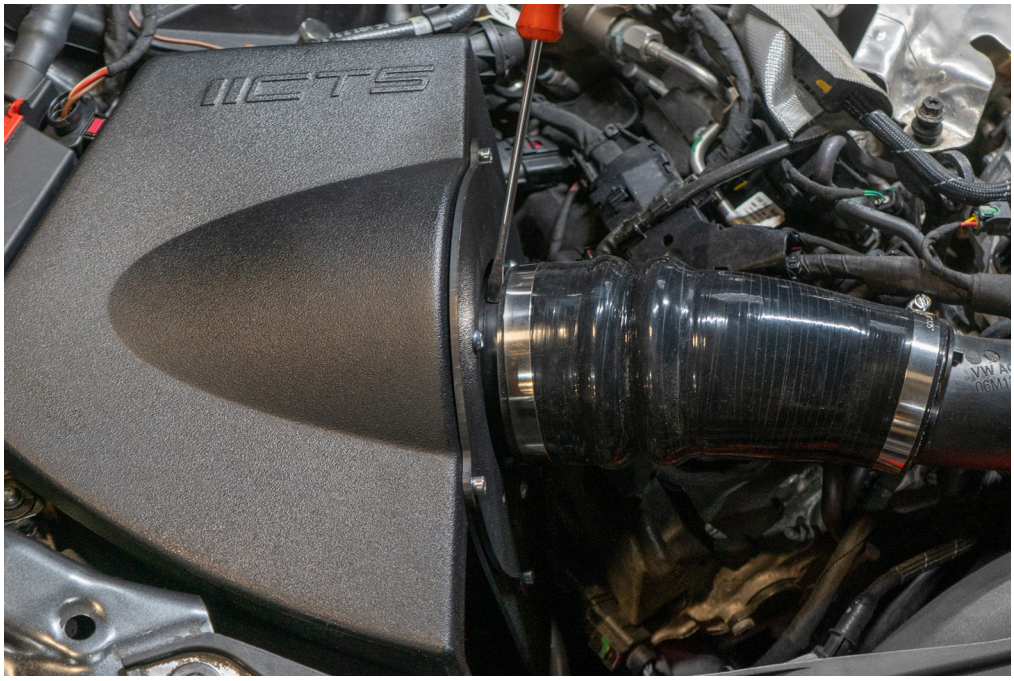

## STEP 11

Install the air dam and provided bolts.

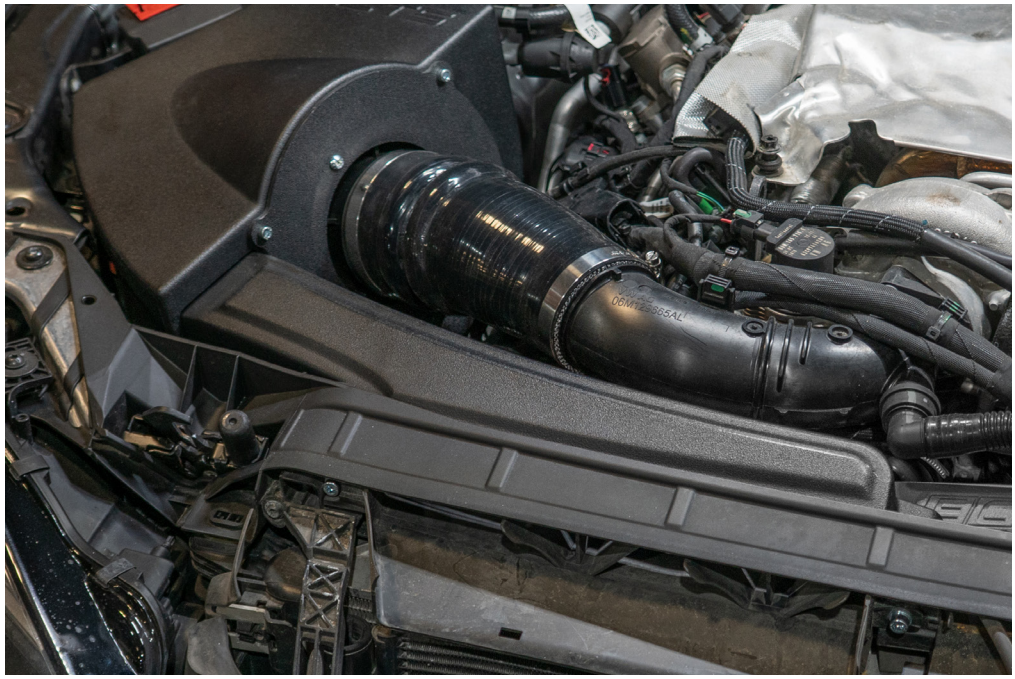

## STEP 12

Reinstall the front cover and latch handle!

You are done.

DO NOT FORGET THE LATCH HANDLE!!

