
# *Monteringsanvisning / Installation instructions*
# *Artikel / Article 040DHG1R*

**VW Golf VI GTI 211 hp Bensin/petrol Turbo 2009-**

Läs även "Allmän monteringsanvisning"
Also read "General fitting instruction"

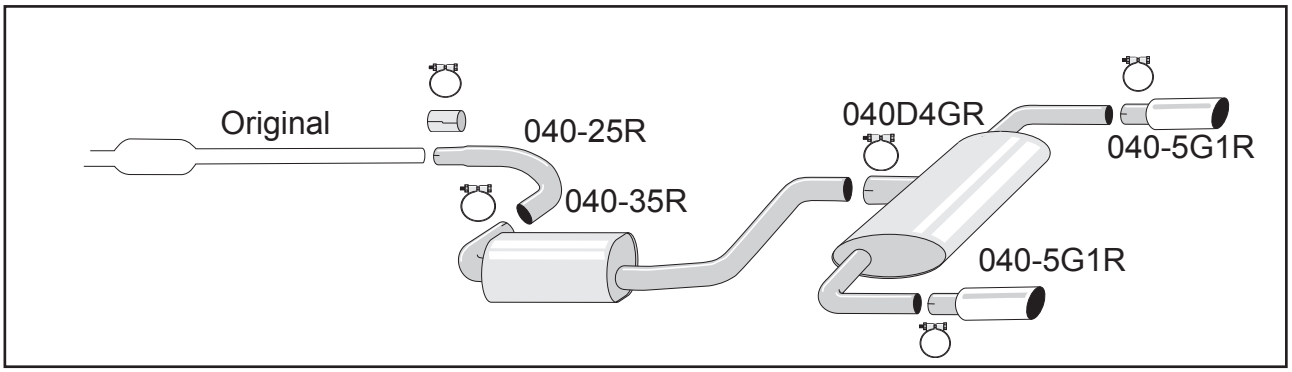


Avgassystemet skall monteras i bilens original upphängningspunkter på samma sätt som originalsystemet.

040-25R passar mot "original" 60 mm. För att montera mot "original" 55 mm skall den medföljande hylsan placeras inuti inloppet på 040-25R

Om den bakre ljuddämparen hänger för högt på höger sida skall upphängningen sänkas på denna sida. Använd plastbrickor och skruvar från kittet i monteringssatsen. Där finns också ytterligare instruktioner hur man skall göra.

The exhaust should be mounted in the original hanger points in the same way as the original exhaust.

040-25R fits against "original" 60 mm. In order to fit against "original" 55 mm the supplied sleeve shall be used inside the inlet end of 040-25R

If the rear silencer dont level correctly the suspension on the right side should be lowered. Use plastic washers and bolts from the supplied kit. There you will also find further instructions how to do this.